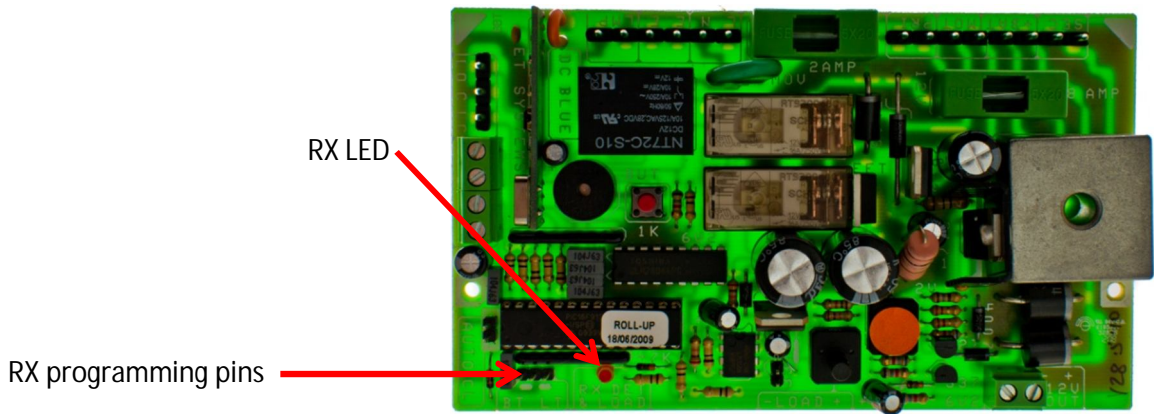

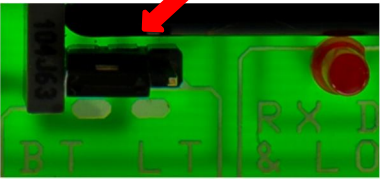



How to program a remote into your:  
**ET BLUE ROLL**






<b>ET BLUE</b>	<b>Compatible with both the ET Blue and ET BLU MIX ranges of remotes</b>	<b>ET BLU MIX</b>
	<p>(NB. The ET BLU MIX remote button must be set to the old ET Blue code for use on this motor)</p>	

Learning a remote transmitter button in the receiver for open/close operation: - (25 user memory)		
Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX LED flickers lightly.
Short circuit the middle RX programming pin to the BT pin.		On board buzzer beeps confirmation. 1 Beep = First transmitter learnt. 2 Beeps = Successful there is still memory available. 10 Beeps = memory full.
Remove the short circuit once buzzer beeps confirmation.		RX LED remains lit in standby.
Release remote transmitter button		

How to program a remote into your:  
**ET BLUE ROLL**

**Learning a remote transmitter button in the receiver for courtesy light operation: -  
(6 user memory)**

Action	Pictorial confirmation	Response
Press and hold the required remote transmitter button		RX LED flickers lightly.
Short circuit the middle RX programming pin to the LT pin.		On board buzzer beeps confirmation. 1 Beep = First transmitter learnt. 2 Beeps = Successful there is still memory available. 10 Beeps = memory full.
Remove the short circuit once buzzer beeps confirmation.		RX LED remains lit in standby.
Release remote transmitter button		